


Parlé
Pipe Extension Kit (PMA 2000-PE)
Installation Guide



Contents

- 3' (915mm) Aluminum Pipe (x1)
- Instructions

Note: May be used to extend the length of another pipe-mounted Parlé device (ex. TCM-X or ABC 2500 Bar).

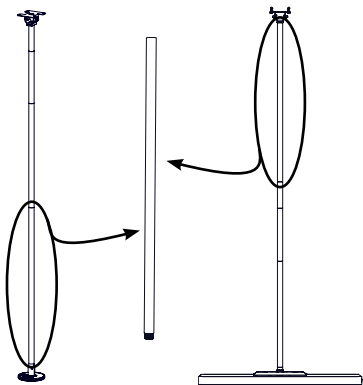


Installation

Determine the length of pipe (including pipes included with the mounts) needed to suspend the device from the ceiling. Configure the pipes to give you the desired length. See the table below for examples. Multiple extensions may be used to achieve the total length necessary.



The maximum length of the full pipe (ceiling to device) is 30' [9.1m]

1. Insert applicable cable(s) through the pipe and then thread the pipe into the ceiling mount or the pipe above and tighten fully.
2. Repeat to add as many extensions as necessary.
3. Follow the instructions included with the ceiling mount assembly to mount the device to the pipe.

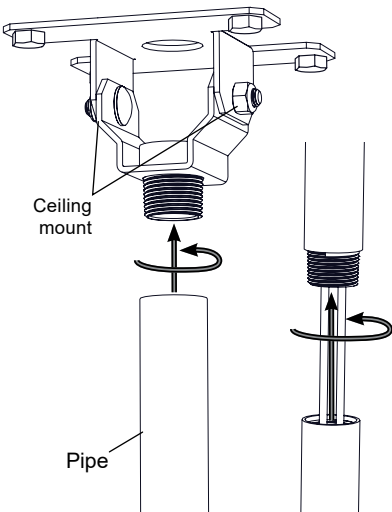

		Pole Sections				
		Ft (cm)	0.5 (15.2)	1 (30.5)	2 (61.0)	3 (91.5)
Overall drop length	4 (122)	●				●
	4.5 (137)	●	●			●
	5 (152)				●	●
	5.5 (168)	●			●	●
	6 (183)		●		●	●
	6.5 (198)	●	●		●	●
	7 (213)		●			● (x2)
	7.5 (229)	●	●			● (x2)

CONTACT US

Email: support@biamp.com Web: support.biamp.com



A: 9300 Gemini Drive, Beaverton, OR 97008

W: www.biamp.com